


mynt

User Manual

COUPLEWARE MULTICOOKER

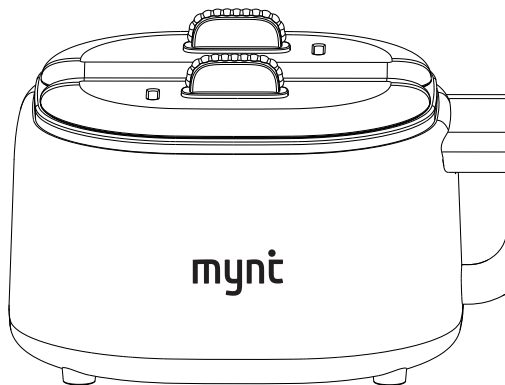


MN-HA05.

Please read and keep this manual carefully before using the product.

CONTENT

1. Parts Identifications
2. Product Instructions
3. Safety Precautions
4. Cleaning and Maintenance
5. Product Specifications

PARTS IDENTIFICATION

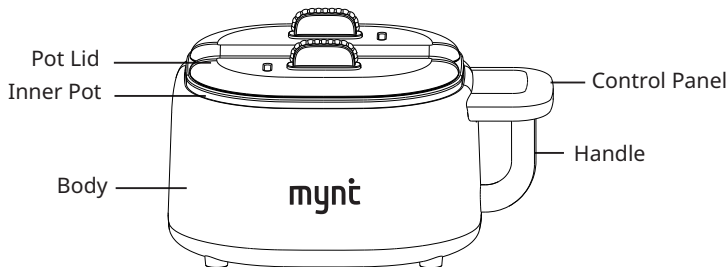

Product Accessories

Pot Lid * 2
Product * 1
User Manual * 1
Power Cord * 1

Due to product technology upgrades, appearance changes, or function optimizations, this product may differ from the descriptions and illustrations in this manual. Please refer to the actual product for the latest information.

PRODUCT INSTRUCTIONS



After powering on: The buzzer sounds once, all indicator lights and digital display light up for 1 second, then the indicator lights turn off, and the digital display shows "- - -". The appliance enters standby mode.

Left Panel Function: Press the "Function" key to select "**Rice, Claypot Rice, Stew, Noodle Porridge, Soup, Hotpot, Cake, Grill/Fry**" - the corresponding indicator light flashes for 3 seconds. Without further operation, it will start working. Alternatively, press the "Start" key to initiate the selected function. The indicator light will remain on, and the digital display will show the countdown time.

Right Panel Function: Press the "Function" key to select "**Rice, Multigrain, Stew, Noodle, Porridge, Soup, Hotpot, Cake, Baby Food**" - the corresponding indicator light flashes for 3 seconds. Without further operation, it will start working. Alternatively, press the "Start" key to initiate the selected function. The indicator light will stay on, and the digital display will show the countdown time.

1. The "**Rice**" function defaults to 500W continuously working for 45 minutes, then enters the default 24-hour keep warm function.
2. The "**Claypot Rice**" function defaults to 500W continuously working for 60 minutes, then enters the default 24-hour keep warm function.
3. The "**Stew**" function defaults to 500W continuously working for 120 minutes, then enters the default 24-hour keep warm function.
4. The "**Noodle**" function defaults to 500W continuously working for 25 minutes, then enters the default 24-hour keep warm function.
5. The "**Porridge**" function defaults to 500W continuously working for 60 minutes, then enters the default 24-hour keep warm function.
6. The "**Soup**" function defaults to 500W continuously working for 60 minutes, then enters the default 24-hour keep warm function.

7. The **"Hotpot"** function defaults to 500W continuously working for 4 hours. When cooking, press the function key to adjust the power P1/P2/P3/P4/P5 in a loop, P1 being low heat.
8. The **"Cake"** function defaults to 500W continuously working for 45 minutes, then enters the default 24-hour keep warm function.
9. The **"Grill/Fry"** function defaults to 500W continuously working for 60 minutes, then enters the default 24-hour keep warm function.
10. The **"Multigrain"** function defaults to 500W continuously working for 60 minutes, then enters the default 24-hour keep warm function.
11. The **"Baby Food"** function defaults to 500W continuously working for 60 minutes, then enters the default 24-hour keep warm function.

PRESET FUNCTION

1. Maximum preset time is 24 hours.
2. Press the **"Function"** key to select the desired menu. The corresponding menu function light will flash. Then press the "Preset" button to adjust the preset time. The default time is 1 hour in a continuous loop, with a maximum preset time of 24 hours. If no buttons are pressed for 3 seconds, the appliance will automatically begin the preset function. Alternatively, you can press the "Start" button to initiate the program. Once started, the program light will remain illuminated, and the digital display will show the remaining preset time.

3. Press the "**Preset**" button to select the desired delay time. The default delay is 1 hour, and pressing the Preset button again to increases the delay by 1 hour in a continuous loop, with a maximum of 24 hours. After selecting the delay, press the "Function" key to choose the desired menu. The corresponding menu light will flash. If no buttons are pressed for 3 seconds, the appliance will enter the adjusted preset timer. Alternatively, you can press the "Start" button to initiate the program immediately. Once started, the program light will remain illuminated, and the digital display will show the remaining preset time.

KEEP WARM FUNCTION

1. Maximum keep warm time is 24 hours.
2. Press the "Keep Warm" button to activate keep warm function. The default setting is 8 Hours. Pressing the button again increases the keep warm time by 1 hour in a continuous loop, up to a maximum of 24 hours. If no buttons are pressed for 3 seconds, the Keep Warm Function will automatically start. Alternatively, you can press the "Start" button to initiate Keep Warm mode immediately. The digital display will show the remaining Keep Warm time

START/CANCEL FUNCTION

After selecting the menu, press "**Start/Cancel**" button to start the program and begin working. During the working process, click again to end the work.

SAFETY PRECAUTIONS

Important Notices

⚠ Warning: Be cautious of risks that may cause danger, severe injury, or significant property loss.

1. Before operating the product, please ensure the lid is properly closed.
2. Do not touch the inner pot directly with your hands during operation to prevent scalding from high temperatures.
3. Please be careful of the steam vent and inner pot to avoid scalding.
4. Do not immerse the lid and main unit in water.

⚠ Warning: Be attentive to risks that may cause personal injury or property damage.

1. This product is intended for household use only. Commercial use is strictly prohibited. Users must strictly follow the instructions in the manual and refrain from disassembling or assembling the machine without guidance.
2. This product should not be used by individuals with physical, sensory, or mental disabilities, or lack of relevant experience or knowledge (including children), unless supervised or instructed by a responsible person to use the product safely.

3. This product is intended for use only with matching accessories (including those configured with the product itself and those independently sold by the company). Do not use non-matching parts to prevent accidents.
4. The input voltage/frequency of this product is 220-240V~50Hz. Before connecting to the power supply, check if it matches the local voltage. Voltage higher or lower than this may affect the performance of the product or damage electrical components. It is recommended to use a voltage stabilizer to ensure normal operation of the product.
5. Before use, check if the main unit and inner pot are intact. If damaged, please stop using it immediately and contact our customer service for replacement parts.
6. If the power cord is damaged, it must be replaced by a professional, the manufacturer, or a similar entity to avoid danger.
7. Do not plug or unplug the power cord with wet hands to avoid electric shock. When disconnecting the power, pull out the plug instead of pulling the power cord. Do not let the power cord touch sharp edges or corners to avoid damage and electric leakage.
8. Place the product on a flat and stable surface before use. Do not operate it on tilted or unstable surfaces or on flammable items such as carpets, towels, plastics, or paper, and keep away from the edge of the surface to prevent tipping or accidents.
9. During operation, do not move the product or touch components such as the steam vent or inner pot to avoid personal injury.

10. All function times of this product are set, and after each function completes its work, it needs to stop for at least one minute. After continuous operation for three cycles, the power must be disconnected, and the product should cool down for 15 minutes before use to ensure the product's service life.
11. The continuous heating time of this product should not exceed 120 minutes. If there is a power failure when making soup or hot drinks, the ingredients should be replaced and remade before reconnecting the power to avoid sticking.
12. If liquid spills out during operation, disconnect the power immediately and clean it in time to prevent liquid from spilling onto the connection, causing machine damage.
13. If the product experiences dry heating and power failure during operation, disconnect the power first, unplug the plug, add an appropriate amount of cold water to reset, clean the inner pot thoroughly after cooling for 15 minutes, and then use it again.
14. After the product completes its function, it will emit three beeps. Disconnect the power first, open the lid, remove the ingredients, clean the inner pot thoroughly, and then proceed with other function preparations.
15. This product uses intelligent chip control. Intermittent fluctuations in sound during operation are normal phenomena.
16. Do not put any parts of this product in a dishwasher, microwave, disinfection cabinet, or any liquid for cleaning and disinfection.

17. Do not place this product in environments with high temperatures, strong magnetic fields, flammable or explosive gases, etc., to prevent abnormal operation or accidents.
18. Disconnect the power when not in use to prevent short circuits.
19. Large or elongated ingredients should be processed before use, and the size of the ingredients should not exceed the actual capacity of the inner pot.
20. If the inner pot is filled with too much water, boiling water may overflow. Do not exceed the maximum water level line of the inner pot when adding water.
21. When the product is not in use, pull out the power plug, cover the lid, and store the product in a dry place to prevent electronic components from getting damp and affecting the product's service life.


WARNING



Do not modify the product. Unauthorized disassembly and repair by non-professional maintenance personnel may lead to fire, electric shock, and injury accidents.




Keep this product out of reach of children or individuals with impaired cognitive abilities. Children and individuals with impaired cognitive abilities should use this product under the supervision of a guardian.

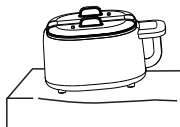


Do not use on uneven surfaces




Make sure to disconnect the power before cleaning.

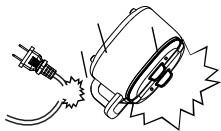


If the product's power cord or plug is damaged, or if the product has been dropped, it should not be used. If the power cord is damaged, it should be replaced by a professional.

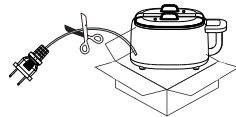


When disposing of the product, it is recommended to cut off the power cord. It is also recommended to take the same measures for any parts that may pose a danger, especially those that pose a danger to children.

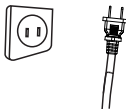

Check that the plug and power cord are intact to avoid the risk of electric shock.

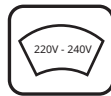


Ensure that the power supply is a safe grounded power source, and that the local voltage matches the voltage indicated on the product.

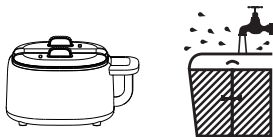

Do not immerse this product in water or other liquids, and do not touch the machine with wet hands to prevent electric leakage accidents.



This product is for household use only. Do not use this product outdoors.

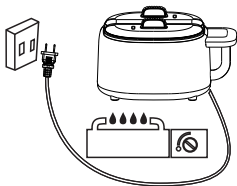

Keep the power cord away from heat sources.



Do not place this product on surfaces with high temperatures.

CLEANING AND MAINTENANCE


1. Before cleaning, ensure the power is unplugged.
2. Beware of residual heat to prevent burns. Please clean after the pot has cooled down.
3. Do not use accessories and parts other than those provided with this product to avoid fire and personal injury.
4. Do not use chemical agents such as alcohol for wiping.
5. Do not use steel wool, hard brushes, or similar tools to scrub the product surface.
6. Do not soak the main unit, power cord, or other parts that are powered during operation.
7. Do not directly spray the main unit and bottom.
8. After cleaning the product, wipe off residual water stains with a dry cloth and place it in a cool place to air dry.
9. Do not expose the product, power cord, packaging accessories, etc., to direct sunlight.

10. When the bottom of the pot is not cleaned thoroughly for a long period of time, a shallow brownish deposit may accumulate. You can pour in water to soak, and then wipe clean by dipping a white cleaning cloth in white vinegar gently along the bottom texture.
11. Please operate on a level surface, avoiding operation on carpets, towels, plastic, paper, and other flammable materials.
12. Do not put the product accessories into the disinfection cabinet or dishwasher for cleaning and disinfection to avoid deformation and damage.

PRODUCT SPECIFICATIONS

Model No.	MN-HA05
Product Name	Coupleware Multicooker
Rated Voltage	240V, 50Hz
Rated Power	1000W
Net Weight	1.35kg
Product Size	300 x 250 x 175 mm

SCHEMATIC DIAGRAM

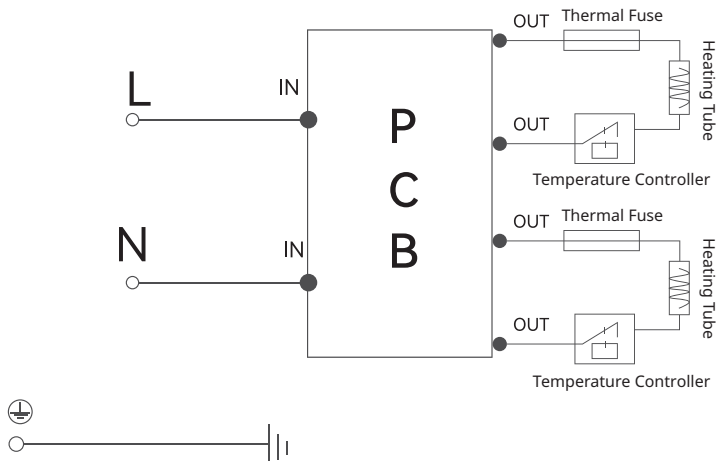



SCAN ME

REGISTER E-WARRANTY in 4 SIMPLE STEPS

Please register your warranty online



01

Scan QR Code or
log in to
<https://www.mynt.com.my/e-warranty.html>



03

Register Product
Warranty



02

Attach Product
Invoice



04

Receive Confirmation
Email