




User Manual

MYNT AMAZCOOK HYBRID COOKER

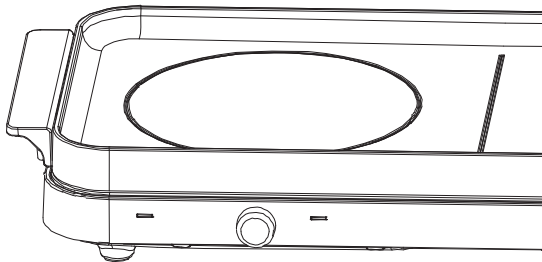

MN-HA04.

Please read and keep this manual carefully before using the product.

CONTENT

1. Safety Precautions
2. Product Specifications
3. How to Use
4. Care & Maintenance

SAFETY PRECAUTIONS

1. Use only wooden or nylon utensils to prevent scratching the pan surface.
2. Do not touch the baking pan or operate the appliance near children to avoid burns.
3. For electrical safety, never immerse the appliance, cord, or plugs in water.
4. Close supervision is necessary when the appliance is in use. This appliance is not intended for children.
5. If the appliance is damaged (cord, plug, or pan), contact customer service for repairs. Do not attempt to fix or disassemble it yourself.
6. Place the product on a flat, stable, and heat-resistant surface, away from other heat sources to prevent overheating.
7. Avoid dry burning and ensure proper ventilation during operation.
8. Unplug the cooker after turning it OFF and allow it to cool completely before cleaning or handling parts.
9. Do not use a broken cooktop, a damaged cord or plug, or the appliance outdoors or in damp areas.
10. Only use attachments or accessories provided by the manufacturer, and avoid letting the cord hang over edges or touch hot surfaces.
11. Do not place the appliance on or near hot surfaces, in a heated oven, or under a cabinet when in use. Always unplug it before storing.


12. This appliance is intended for household use only. Do not use this appliance for anything other than its intended purpose.
13. Maintain proper ventilation while in use. Keep the cooker at least 4-6 inches away from walls or cabinets.
14. Do not cover or place flammable materials near the appliance while in operation, and avoid placing metallic objects or flammable materials on the cooktop.
15. Always pull the plug directly from the wall outlet, not the cord. Use a separate electrical circuit to avoid overloading.
16. Clean the appliance regularly with a soft sponge or cloth to prevent grease buildup (fire hazard). Avoid steam burns during cleaning.
17. Do not move the appliance with cookware on top, and use extreme caution when moving hot pots or pans.
18. When finished, turn off, unplug, and allow the cooktop to cool completely before storing.

PRODUCT SPECIFICATIONS

Product Name	MYNT Amazcook Hybrid Cooker
Product Model	MN-HA04
Rated Voltage	240V, 50Hz
Rated Power	2200W
Product Size	610 x 275 x 85mm
Product Weight	4KG
Packaging Dimension	641 x 322 x 126mm
Mail Box Weight	5KG

PARTS IDENTIFICATIONS

1. Non-stick Grill Pan
2. Heat conduction stove
3. Temperature Control knob
4. Non-slip Stand
5. Indicator Light
6. Power Cord

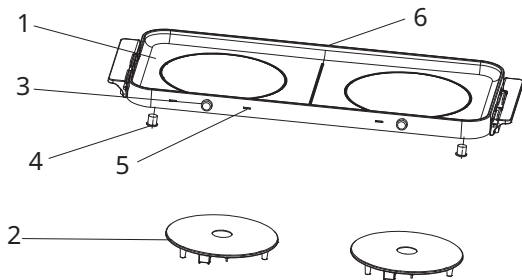

HOW TO USE

1. Plug the power cord into a compatible power socket. Ensure the electrical voltage supply matches the specifications on the rating label located on the base of the unit.
2. For grilling, place the grill pan on top of the heat conduction stove.
3. After powering on, turn the temperature knob to the desired level, the appliance will start to heat up.
4. The grill pan will start to heat up and ready for grilling purpose.
5. For normal cooking purpose, simply remove the grill pan and use the stovetop with your desired cookware.
6. To turn off the cooker completely, rotate the temperature control knob counter-clockwise to the "off" position. The heating element will deactivate (led light will go off), and the cooktop will stop functioning.

ATTENTION

The heating indicator light goes off during the heating process, indicating that the temperature has reached the set range of the thermostat control and the heating will stop. Once the temperature drops slightly, the heating will automatically start again, so the heating indicator light will be on and off during use.

TIPS

The cooktop utilizes conduction heating, boasting exceptional compatibility with a wide range of pots and pans. However, for the best results, it's recommended to use cookware labeled for conduction cooktops.

NOTE

The size and surface area of the pan or pot may affect conduction efficiency. Using cookware that is too small or has limited surface area for the conduction cooker's heating element may result in uneven heating. Contact us for assistance with any issues.

CARE & MAINTENANCE

1. Turn off the cooker and unplug the appliance before cleaning.
2. Allow the grill pan to cool completely before handling.
3. Wash the grill pan with a soft sponge and mild detergent. Rinse it thoroughly with clean water. Do not use hard objects such as metal wires, scouring pads, nylon brushes, harsh or abrasive cleaners, as they can damage the coating surface.
4. Do not immerse the appliance or power cord in water or any other liquid. Wipe clean the appliance with a damp cloth.
5. After extended use, the air vent may accumulate dust or dirt. Clean it with a soft brush or a small vacuum cleaner.



SCAN ME

REGISTER E-WARRANTY in 4 SIMPLE STEPS

Please register your warranty online



01

Scan QR Code or
log in to
<https://www.mynt.com.my/e-warranty.html>



03

Register Product
Warranty



02

Attach Product
Invoice



04

Receive Confirmation
Email