 




User Manual

 
MYNT GENTOUCH BODY TRIMMER

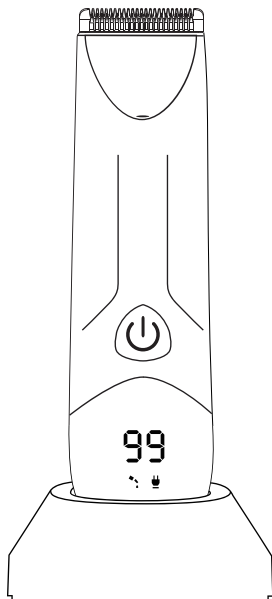

MN-HB01.

Please read and keep this manual carefully before using the product.

INTRODUCING GENTOUCH BODY TRIMMER

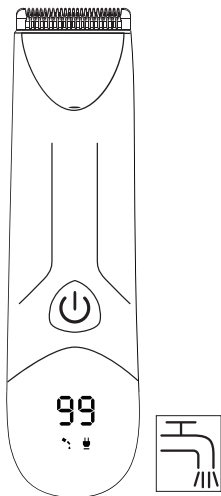


FEATURES

- ◆ Skin-safe replaceable ceramic blades for smooth & safe grooming.
- ◆ 4 adjustable trimming guide combs cater to various hair lengths, guaranteeing an even trim effortlessly.
- ◆ Powerful motor ensuring high speed, low vibration & ultra-quiet operation.
- ◆ Waterproof at an IPX5 level, it can be used to cut Wet/Dry hairs while taking bath & it is easy to clean.
- ◆ LCD display enables you to monitor the power during use. The built-in torchlight illuminates every detail, ensuring safe precision in any lighting condition.


Technical Specifications

LCD Digital Display
Built-in rechargeable 600mA Li-Ion battery
Charging Time: 3-4 hours
Running Time: 100-120 minutes
Accessories: USB Charging Cable, Charging Dock, Cleaning Brush.

 ACCESSORIES

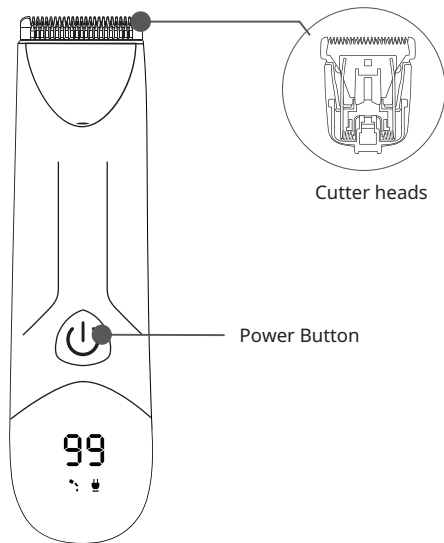


Accessories view

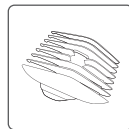 


Guide
Combs



 
Charging
Dock



Charging
Cable

 

Cleaning
Brush

 


Blade
Lubricant

HOW TO USE

◆ ON/OFF

Press the button to power on the device. The number on the LCD display will illuminate, and the blade will begin moving back & forth.

 Press the power button once more to activate the LED light. Press the button a second time, and the device will shut down.

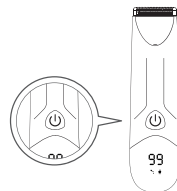

CHARGING INSTRUCTIONS

Connect the USB Charger to the Gentouch Trimmer or charging dock to charge it. Ensure that the device is turned off before charging it.



The LCD screen will illuminate when the device is charging, displaying the current battery percentage.

The USB can be plugged into any socket, including wall outlets, portable power banks & laptops.

Reminder: Please charge the Gentouch before using it.

Reminder: Please note that while charging, the LCD screen on the trimmer will keep blinking until it stops at 99% to indicate a full charge

Warm Reminder: After purchasing this product, please fully charge it before first use. If it has not been used for a long time, please charge it every 3 months.

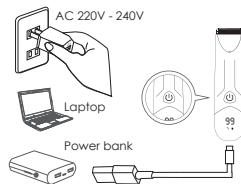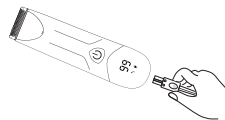

GUIDE COMBS

◆ GUIDE COMB & CHARGING DOCK




Guide Comb



Charging Dock


Use the Guide Comb to cut hair lengths of 2mm, 4.5mm, 6mm & 6.5mm.

Charge the device using the Charging Dock or directly with the cable.

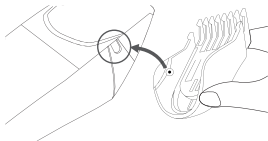

PUT-ON METHOD

Face the comb towards the slot of the cutter head. When putting the comb on, ensure it is securely fixed onto the latches on the side of the device. (As shown).

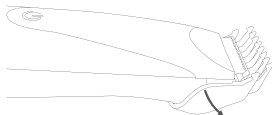


TAKE-OFF METHOD

Gently drag open one side of the guide comb using your fingers. Avoid pulling the comb too forcefully to prevent any potential damage.


NOTE: The guide comb allows for the adjustment to the desired hair length, not hair thickness.

CUTTER HEAD FEATURES

◆ CUTTER HEAD FEATURES

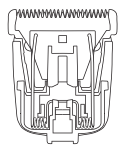


Front View

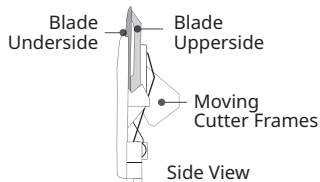

Side View

Our ceramic blades are durable, sharp, hygienic & stainless


◆ CUTTER HEAD INSTALLATION

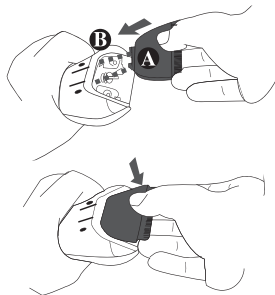

1 Align part A with part B, ensuring that the blade is facing upward.

2 Once part A & part B are aligned, press the blades in until you hear a click sound

♦ HOW TO DETACH THE BLADE

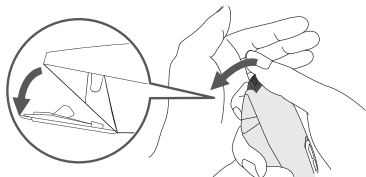

Turn off the device, press the cutter teeth using your thumbs & push forward in the direction of the arrows.


During the process of removing the cutter heads, use one hand to push forward while using the other hand for support to prevent the cutter head from falling down.

⚠ WARNING

- ♦ The ceramic blades are very fragile & prone to damage when being put on or taken off. Please handle them with care.
- ♦ When ceramic blades are broken, please replace them as they will clamp & stop functioning.
- ♦ Please replace cutter heads every 60 days for optimal performance.
- ♦ Regularly sterilize the blades & ensure they are hygienic before trimming.

CUTTER HEAD CLEANING & MAINTENANCE


♦ CUTTER HEAD CLEANING

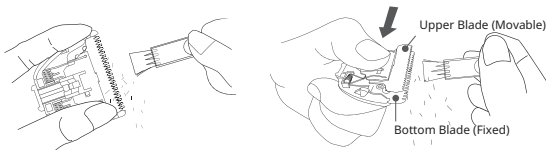


Clean off hair scraps with the cleaning brush.

⚠ WARNING

- ♦ Never remove the spring from the cutter head, as doing so may prevent the spring from reverting to its original state.
- ♦ Please remove the cutter blades after use. Clean off scattered hair on the cutter head surface & in between blades to maintain sharpness.
- ♦ Clean the cutter head with water & thoroughly dry it afterward.

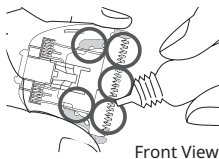

After cleaning, drop the blade lubricant oil into the blade.

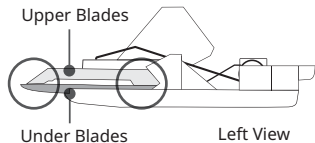

The lifespan of the blade depends on your trimming frequency & the maintenance of the trimmer.

Please replace worn-out blades to avoid hair clamping. For any replacement parts, kindly visit our web store to purchase the appropriate blades for replacement. Never attempt to fit blades other than those designed for Gentouch Trimmer.

CLEANING & MAINTENANCE

 
◆ BODY CLEANING



Brush off cutter hair scraps from the cutter head slot.




Rinse the trimmer with water.

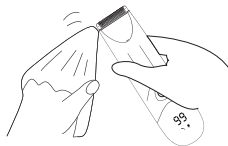

Dry the trimmer with a cloth & reattach the blades. Store it properly for future use.

◆ PROHIBITED LIQUIDS

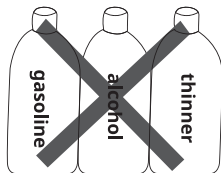

Do not use gasoline, alcohol, thinner & other corrosive chemical agents to wipe the Gentouch Trimmer.

Otherwise, its outer shell may change colour. We recommend cleaning any dirty marks on the trimmer surface with a solution of weak alkaline soap & water.



SCAN ME

REGISTER E-WARRANTY in 4 SIMPLE STEPS

Please register your warranty online



01

Scan QR Code or
log in to
<https://www.mynt.com.my/e-warranty.html>



03

Register Product
Warranty



02

Attach Product
Invoice



04

Receive Confirmation
Email